

Resin Spots

Tools


- ▶ 2-part resin kit
- ▶ Small bucket

Applicable products

- ▶ Wall Panel
- ▶ Ceiling panel
- ▶ Clouds

Product handling & storage

- Clean white gloves must be used whenever handling panels.
- Store panels on a flat, dry, solid surface. Do not store on edge.
- Keep panels dry, clean and free from dust and damage.

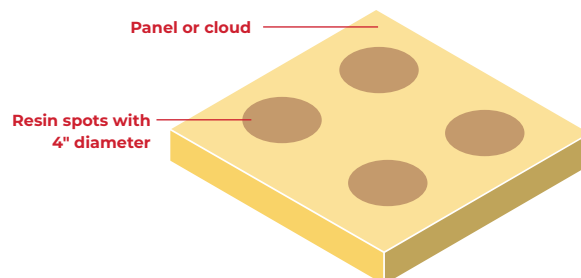

When to apply this?

▶ Fastening your own hardware

Conwed offers many hardware options, and even custom solutions. If you have your own hardware or solution in mind already, then ordering panels with just resin spots allows you to install hardware however you see fit.

Instructions for adding resin spots

1. Acquire and follow instructions for preparing a 2-part resin kit.
2. Test the mix in an inconspicuous area to verify a proper mixture.
3. With the panel lying flat, create a 4"-diameter spot where your fasteners need to go. Allow the resin to slowly flow into the fibers of the panel.
 - ▶ **NOTE:** New spots should be no less than 2" from the edge of the panel. Spots closer than 2" can cause damage to the product and an unsafe wall support.
4. Once the resin has cured per the kit's instructions, screw the necessary hardware into the new spot using two #8 self-drilling screws, being careful not to strip them out.

