

Wall Panel | Z-Clip | Z-Bar

Product

 Mounting attachment
to product

 Mounting attachment
to surface

Tools


- ▶ Drill
- ▶ Phillips bit
- ▶ Level
- ▶ Laser level (recommended)
- ▶ Construction adhesive (optional)
- ▶ Loctite PL Premium
- ▶ Liquid Nails Heavy Duty

Parts



Product handling & storage

- Clean white gloves must be used whenever handling panels.
- Store panels on a flat, dry, solid surface. Do not store on edge.
- Keep panels dry, clean and free from dust and damage.

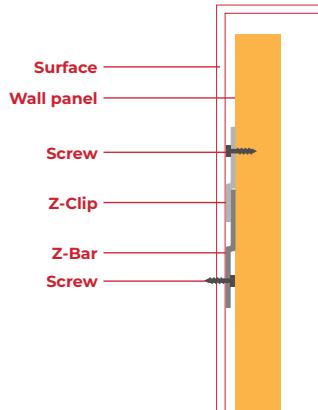

Scan for technical
drawings
[conwed.com/
details-zc-zb](http://conwed.com/details-zc-zb)

Planning the install

- ▶ Review the materials list supplied by Conwed and any drawings. Carefully determine the starting position of the Furst panel. Note markings on panel back include item number from packing list, then panel tag number.
- ▶ In many cases, standing the panels against walls in numbered sequence is helpful.
- ▶ Note that a minimum 1" clearance at the panel top is required for clip engagement.

Installing Z-Bars

1. Measure the z-clip locations on the back of the panels and transfer to the wall. Chalking the clips and pressing panels to the wall can help with location.
2. Use a laser or snap a line using z-clip locations to provide a wall bar locating guide.
3. Install z-bars using appropriate mechanical fasteners for the mounting surface. Cut z-bars to desired lengths, and use drops as needed.

4. Fur out hardware to compensate for uneven walls, assuring proper face alignment.
5. Install panel by holding against wall and lowering into place to engage clips. Ensure that all z-clips are engaged.
6. **Optional:** Add a 'dab' of adhesive to mating surfaces to prevent unwanted movement. Doing so is a permanent solution.